

HUME HOW TO

Video Instructions for
how to install a cavity unit



100% Australian Owned

QR
CODE

WATCH VIDEO



Scan QR code for D.I.Y video or visit Hume How To on our website:
www.humedoors.com.au/hume-how-to-install-a-cavity-door.php

EVOLUTION Cavity Unit

INSTALLATION INSTRUCTIONS

www.humedoors.com.au

Components supplied with cavity unit

1 x head/ track
1 x Timber pelmet cover trim (to be cut to size).
Assorted screws


Component pack including:

2 x 4 wheel assemblies
2 x base plates
1 x bumper stop
1 x adjusting spanner
1 x Left hand door guide
1 x Right hand door guide

Includes – closing jamb (VIC. SA. TAS. WA)

Excludes – closing jamb (QLD. NSW. ACT)

Excludes – door and door furniture

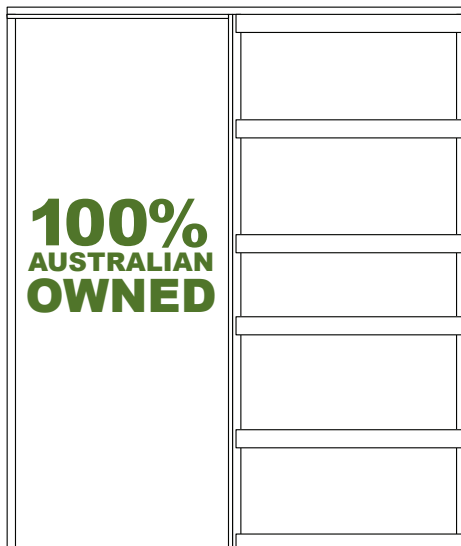

Contact Details

Sydney (NSW)
Head Office & Showroom
120 Hume Highway
Lansvale 2166
Ph: (02) 9794 1111
Fax: (02) 9794 1199

Adelaide (SA)
89 Heaslip Road
Burton 5110
Ph: (08) 8280 2000
Fax: (08) 8280 8099

Brisbane (QLD)
86 Mudgee Street
Kingston 4114
Ph: (07) 3489 6200
Fax: (07) 3489 6299

Perth (WA)
75 Briggs Street
Carlisle 6101
Ph: (08) 9470 1800
Fax: (08) 9472 3802

Melbourne (VIC)
33 Remington Drive
Dandenong South 3175
Ph: (03) 9799 6888
Fax: (03) 9799 9688

www.humedoors.com.au

